

FLAPS SET-UP FOR POWERBOXES

The middle switch position is 1/2 flap. Program this on your transmitter for the one flap which is working in the correct direction - remove the connector of the other flap.. Then you initialize this channel in the PowerBox.

- Choose with the upper selector knob for the channel of the Flap: A,B,C,D or E
- Bring the lower selector knob to "RESET".
- Press both buttons "+" and "-" simultaneously.
- Set your switch in the middle position: press "+"
- Set your switch in one end position: press "+"
- Set your switch in the other end position: press "+"
- Bring the lower knob to "SAVE" and press "+"
- All LEDs must be "off" now.

Now you choose with the lower knob for the servo you want to move. Bring your switch in the middle position and connect the other flap. You can adjust now with "+" and "-" the 1/2 position.

- Move your switch to an end position and hold the "+" or "-" button as long as it needs to move the flap to the reverse position.
- Do the same with the other switch position.

Kind regards / Mit freundlichen Grüßen

Richard Deutsch
PowerBox Systems GmbH